# bittel



We bring good things to Hotel Hospitality!

### Please read this manual before use.

#### 1. Product Overview

UNOPro series telephone continues the design style of Bittel, unique, compact, and exquisite. It's designed for hotel room requirements, using high-quality electronic materials and various patents, feature-rich, and stable in performance. The handset of this product can be placed face down or up, and when it is placed face down, dialing and speaker calling can be realized without picking up the handset.

[Handset] ---- hearing aid compatible.

[Speed Buttons] ---- Speed-dial the phone number with a single key (up to 32 digits), and the number will not be lost when the power is off.

[VOL+/-] ---- Volume up/down key for handset and speaker mode.

[MUTE] ---- During a call, the voice sending will be turn off.

[HOLD] ---- Holds the line during a call.

[ON] ---- The handset power on and speaker switch button.

[OFF] ---- Press this key to hang up while the handset is talking.

[Message Indicator] ---- Ringer, message prompt.


[Programming Function] ---- The speed dial number can be programmed using a handheld cloner or a cloner handset.

Busy tone disconnects automatically.

#### 2. Installation

The telephone should be installed in a dry, ventilated area free of corrosive gases. Insert the end of the handset cord into the handset cord socket and connect the two-prong standard socket on the wall and the telephone line socket of the telephone set with a straight line.

## 3. Functional Diagram

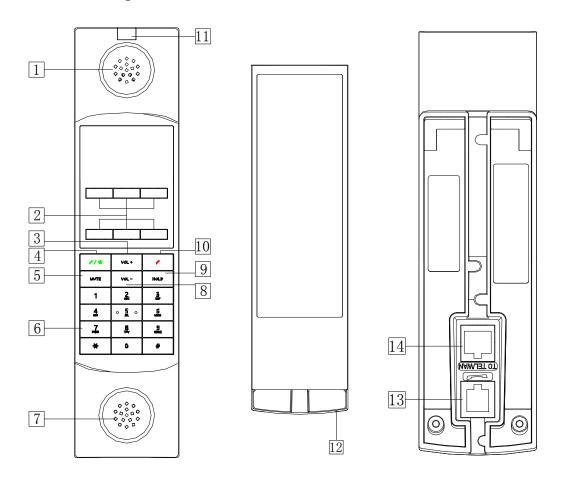

1. Receiver	2. Speed Service Buttons	3. VOL +	4. ON / Speaker	5. MUTE
6. Numerical Buttons	7. Handset Mic	8. VOL -	9. HOLD	10. OFF
11. Message Indicator	12. Speaker microphone	13. Handset Line Socket	14. Telephone Cable Jack	

## 4. Methods of Use

#### 4.1 Off Hook

Under on hook mode, off hook can be achieved in either way below:

- a. If the handset is on the base, lift the handset.
- b. If the handset is on the base backwards, press the green on key to power on the handset.

## 4.2 Hang Up

To end an active call, you can hang up in either way below:

a. If the handset is not on the base, handset/speaker talk state, put back the

#### handset.

b. Whether the handset is on the base or not, handset/speaker mode, press the red hang up button.

## 4.3 Adjust the call volume

- a. When the phone is in the call state, you can adjust the volume of the receiving volume through the VOL+ and VOL- keys, "VOL-" is to reduce, "VOL+" is to increase. Three gears are adjustable.
- b. Whether to restore the handset's receive volume level before last on hook action:

  On hook mode, press "HOLD+N+HOLD+VOL-" N=0, 1, 2, 3 (where 0 means to restore the last set volume after on & off hook, and 1, 2, 3 means to restore the default volume level of 1, 2, 3 after on & off hook).
- c. Whether to restore the speaker's receive volume level before last on hook action: On hook mode, press "HOLD+N+HOLD+VOL+" N=0, 1, 2, 3 (where 0 means to restore the last set volume after on & off hook, 1, 2, 3 means to restore the default volume level of 1, 2, 3 after on & off hook).

#### 4.4 Switch between handset and speaker mode:

- a. Handset to speaker: When the handset is talking, press the power on button (green) and then turn to speaker.
- b. Speaker to Handset: When you are on speaker, press the power on button (green) and then turn the handset.

#### 4.5 HOLD activation and deactivation

- a. On handset mode, press the HOLD key (Hold Led on), the line is in the hold state, press the power on key or HOLD key again to release the hold.
- b. On speaker mode, press the HOLD key (Hold Led on), line that is in the hold state, re-press the power on key, you can release the hold.

## 4.6 MUTE activation and deactivation

In the power-on state, press the MUTE key (Mute Led on), there will be no sending voice; press the MUTE key again, the sending voice will resume.

## 4.7 Speed Dial Programming Store and Clear

a. On hook mode, to store the speed dial numbers:

"HOLD + number + HOLD + speed dial"

b. Enable pressing speed dial to dial out directly:

HOLD+2886+#+1+HOLD (long press 5s)

Disable pressing speed dial to dial out directly:

HOLD+2886+#+0+HOLD (long press 5s)

c. The phone's speed dial can be programmed using a handheld cloner/ cloner handset.

#### 4.8 Message indicator

The indicator can realize incoming ringing prompt, message information indication.

### 4.9 Busy tone auto hangs up function

If you do not hang up correctly after a call, the phone can hang up automatically within a certain period of time after receiving the line busy signal to ensure incoming calls.

#### 5. Installation Precautions

- **5.1** The telephone should be installed in a dry, ventilated, and non-corrosive gas environment.
- **5.2** The telephone should be fire-resistant, splash proof, and shock resistant, and should avoid contact with acids, alkalis, alcohol, and other organic compounds as much as possible.
- **5.3** When using the buttons and toggle switches of the phone, apply even force and avoid applying too much or too fast force to ensure the normal operation of the phone and extend its service life.

## 6. Simple failure diagnosis and troubleshooting

**6.1** Sometimes the phone does not work properly due to improper use or other reasons. Common faults and inspection methods are as follows:

# SHANDONG BITTEL INTELLIGENT TECHNOLOGY CO., LTD en.bittelgroup.com | info@bittelgroup.com | Tel: 86-633-2212103/2212160/2212177/2165001/2165002

Phenomenon	Checkpoints		
Non-Boot	Check if the wiring of the phone is in good contact?		
There is noise or silence	Is the handset rope and straight end properly plugged in?		

**6.2** When your phone malfunctions, please check and deal with it as listed above, and after it is finally determined to be a malfunction of the phone, do not disassemble it by yourself, and go to the designated maintenance point for repair.

#### 7. Environmental Statement

The products meet the requirements of international environmental protection standards, such as packaging materials to comply with the Packaging Directive: Pb+Cd+Hg+Cr6+<100PPM.

#### 8. WARRANTY

This product is warranted for a period of 12 months from the date of purchase against faulty materials or workmanship. If during this period a defect arises, we may repair or replace the product, at Bittel's discretion, provided that:

- 1) The product has not been used for any purpose other than normal use,
- 2) Unauthorized product repair or modifications have not been attempted.
- 3) The product has never been used in a harsh or corrosive environment.
- 4) No damage in transit

THIS LIMITED WARRANTY GIVES THE BUYER SPECIFIC LEGAL RIGHTS. THE BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

This warranty is only valid for merchandise purchased directly from Bittel or dealers or distributors Bittel Co. authorized.

SHANDONG BITTEL INTELLIGENT TECHNOLOGY CO., LTD en.bittelgroup.com | info@bittelgroup.com | Tel: 86-633-2212103/2212160/2212177/2165001/2165002

## 9. FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **CONTACT BITTEL**

Shandong Bittel Intelligent Technology Co., Ltd.

Address: No.177 Honghai 1st Road, Rizhao, Shandong, China 276800

Telephone: +86 633 221 2103 | 221 2160 | 221 2177 | 2165001 | 2165002

Email: info@bittelgroup.com

Web: www.bittelgroup.com

Copyright©2025 Bittel Inc. All rights reserved.