

Telephone HT60DU

User Manual

 
 
 
 


JACOB JENSEN™

CONTENTS

The following items are included in the package
of JACOB JENSEN Telephone HT60DU:



- 1. Telephone handset
- 2. Base station
- 3. Table stand
- 4. RJ Cable

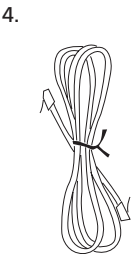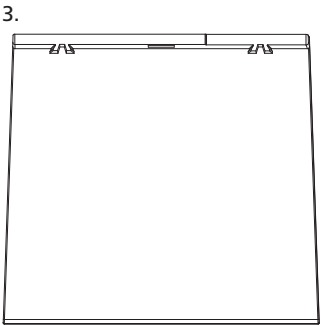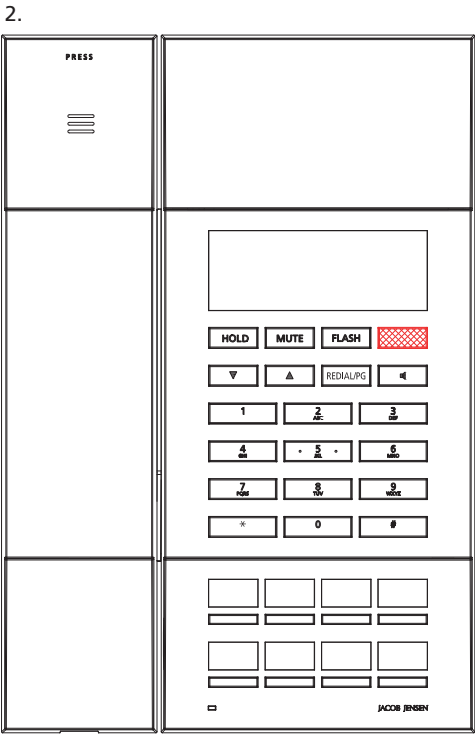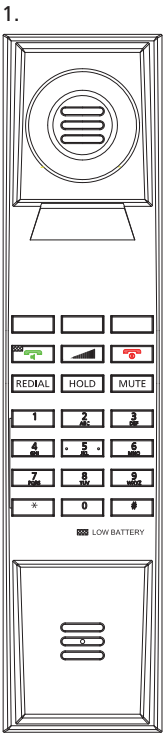


MAIN FEATURE LIST

1. The Handset can make/answer any calls freely. One Base can work with 1- 4 Handsets.
2. Support 1.8/1.9GHz, DECT6.0 standards. Also supports WDCT standard. It adopts HF numerical coding technique between Base and Handsets.
3. Handsets can detect low power and warning, also can rapidly charge battery.
4. It owns Service buttons, which can well meet client's demand
5. The volume can be adjustable which owns five levels.
6. Redial button, the last dialed number will disappear in 5 minutes.
7. Hold and Mute
8. Message Waiting Indicator.

   CONTROLS AND FUNCTIONAL KEYS

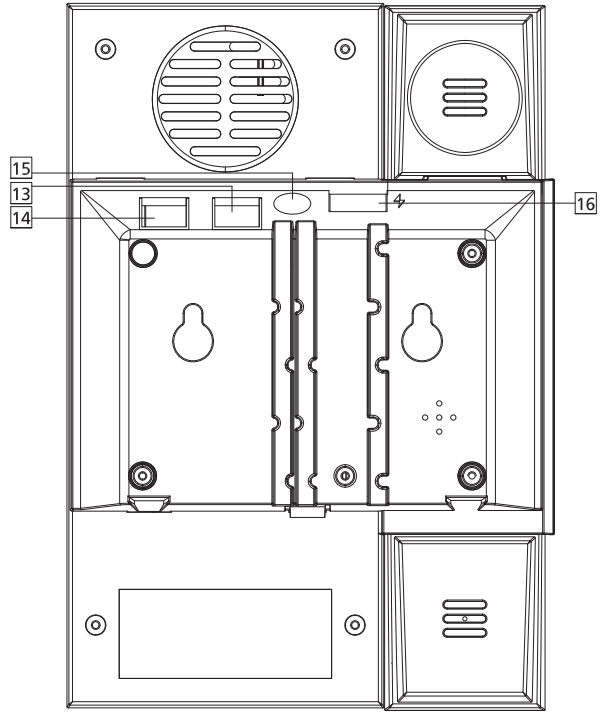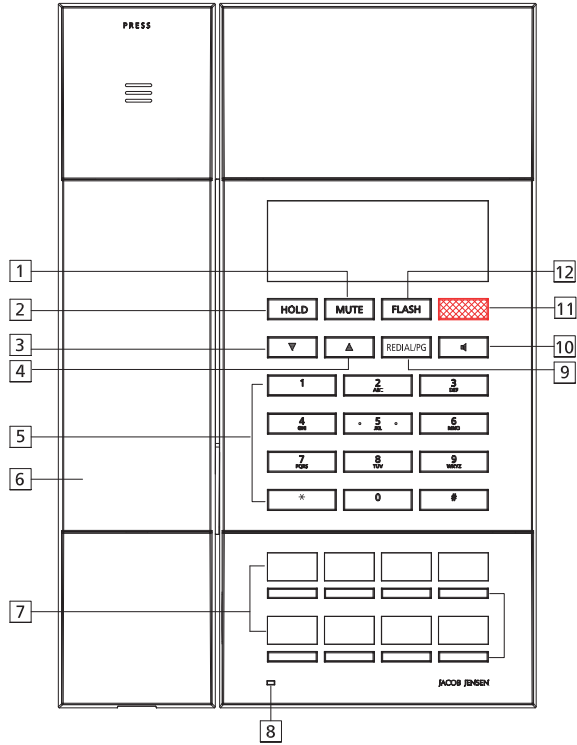

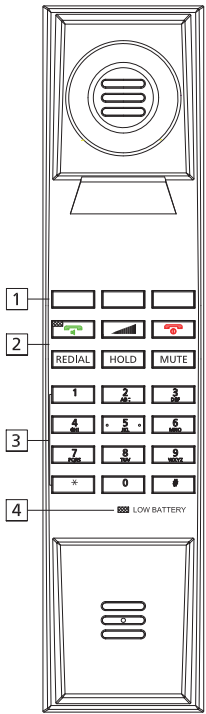

1. Service keys
2. Function Keys
3. Number keys
4. Low Power Indicator

**CONGRATULATIONS ON YOUR NEW JACOB JENSEN™
TELEPHONE**

The telephone is designed in Denmark by Jacob Jensen, whose products have gained international recognition for their original, simple and classic design. Jacob Jensen™ has received about 100 prizes from around the world and has 19 products included in The Design Study Collection and The Design Collection of The Museum of Modern Art in New York.

The HT60DU has been designed specifically for hotel use. Voice over DECT technologies is employed for clear sound and reliable operation.

 
Installation

- 1. Installation the power adapter and telephone cord of the HT60DU Base

First please connect the T-Cable's power jack (Marked 1 in the below figure) with the power adaptor. Then please connect the T-Cable's RJ11 (4 pin. Marked 2 in the below figure) with the telephone line jack in the room. Finally please connect the T-Cable's RJ11 port (6 pin. Marked 3 in the below figure) to telephone set's "TO TEL" port, which is on the back of the phone.



- 2. Install and disassembly the bracket of the HT60DU Base

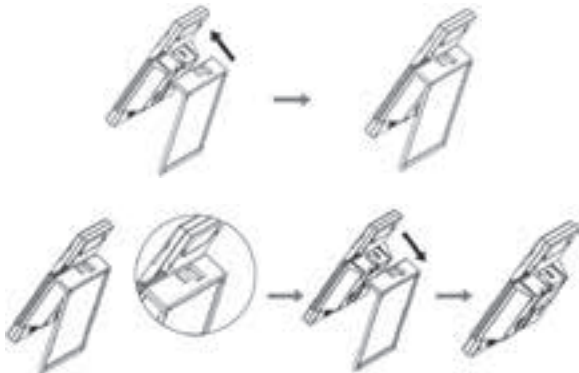

- Note: 1. Please install the phone in dry and clean environment and avoid effected with damp.
- 3. The telephone should avoid fire, water spray, shock, clean the surface dust by soft cloth; chemical solvent is prohibited to use.
 - 4. Put the attached chargeable batteries into the handset, pay more attention to the polarity of socket and signal ribbon cable, also need to notice the direction of the jack and the socket during install the batteries. Strictly prohibit from using the wrong polarity batteries.

OPERATION

Making a call

1. When the cordless handset is in charging station, picking up the handset will enter off-hook status.
2. When the cordless handset isn't in charging station, pressing the  will enter off-hook status. Pressing the  again will enter Speaker status.
3. On-hook status, press  of the base will enter Speaker mode and the IN USE indicator will flash
4. On-hook status, pick up of handset of the base can make a call and the IN USE indicator will flash

Answering a Call

1. When the cordless handset is in charging station, picking up the handset will answer the call
2. When the cordless handset isn't in charging station, pressing the  will enter speaker status and pressing the  again will enter non-speaker status.
3. When there is a call, press  of the base will enter Speaker mode

Volume Adjustment

1. For cordless handset

Off-hook, please press  to adjust the voice volume;
On-hook, please press  to adjust the ringer volume.

2. For the base

Off-hook, press  or  to adjust the voice volume. There are five levels.

HOLD

1. Press HOLD key, the indicator will turn on, the current line is held
2. Press HOLD key again or press  of the handset or press  on the base to release the hold mode.

REDIAL

Off-hook, press REDIAL key of the base or the handset to dial the last number dialed.

Note: The last dialed number will disappear automatically after five minutes.

PAGE

On-hook status, press REDIAL/PG will call the cordless handset.

Mute

Off-hook mode, press MUTE key once to mute the microphone, press it again to remove the mute mode (LED indicator on Base).

Registration

- 1) On-hook status, press HOLD+*+HOLD+MUTE on the base (the indicator of HOLD will flash),
- 2) Press HOLD+*+HOLD+MUTE of the cordless handset,
- 3) After 5-8s, press REDIAL/PG key on the base.
- 4) The handset will ring, which means successful registration.

Service Keys

1. 1. Off-hook mode, press a service key to dial the number directly.

2. How to Store:

Keep the base in on-hook mode, press HOLD+ Desired number + Service key / MWL key. The REDIAL/PG key has the pause feature, which is 2s and can't be changed.

For the cordless handset, in off-hook status, press *+#+8+# then off-hook. Then please program the service keys according to the cloner. The three service keys are the M8, M9 and M10 in the cloner.

3. How to delete:

On-hook mode, press HOLD+HOLD+ service key / MWL key of the base. Please make sure that there is power.

Handset/Base speaker mode and Handset/Base intercom

1. Press  on the cordless handset to enter communication mode; press  again will enter speaker mode. Speaker and Non-speaker mode can be changed through .
2. For the base, if it's in speaker mode, press  will enter into non-speaker mode; press  the handset will enter into non-speaker mode.
3. For the base, if it's in speaker mode, press  twice, then press , the handset will enter into speaker mode.

USB Charging Port

There is one USB Charging Port which can be used to charge for the devices through USB Charging cable.

MAINTENANCE

The phone has been manufactured using the very latest technology and the highest quality components and workmanship, under ISO9001 quality control procedures.

It can be relied on to provide many years of trouble-free service, especially if these simple tips are followed:

- Handle with care, avoiding hard knocks and shocks.
- Do not expose this product to dust, strong sunlight, humidity, high temperature, or mechanical shock.
- Do not use corrosive or abrasive cleansers on this product. Keep the unit dust free by wiping it with a soft, damp cloth.
- Do not tamper with or attempt to modify the phone, it would make it unsafe to use. Should any service difficulties or faults be encountered, the following list may help you identify and remedy problems. In many cases, however, it may be necessary to call the distributor from whom you purchased it.

TROUBLESHOOTING

1. No dialing tone of handset

- 1) Please check the telephone network,
- 2) Please check the connection of handset cord and straight line cord

2. No ringing or no continually ring

Please check the telephone line or the quantity of parallel phone set

3. Noise during talk

Please check the telephone line or please check the handset cord

4. Cordless handset can not be switched on for more than 2 minutes

- 1) If there is reminding sound after pressing (green button), it means that cordless handset wasn't registered to the phone base, need register again.
- 2) cordless handset and phone base's distance beyond range, need to go back to the phone base around before use.
- 3) Batteries do not have enough power, need recharge

5. If there is any problem, please don't open the phone body, please contact us or our local representative. Thanks.

BATTERY

1. The battery should be charged for over 8 hours for the first time or the battery hasn't been used it for over 5 months.
2. After 3 or 4 times, the new battery will reach the best status
3. Please take out of the battery and keep them in dry surrounding if it won't be used for long time.
4. The battery should be changed after 20 months and you'd better purchase the same model from the supplier.

FCC APPROVAL

Complies with Part 68 of the FCC rules. On the bottom of this telephone is a label that contains, among other information, the FCC registration number and the ringer equivalence number (REN) for this telephone. If requested, you must provide this information to the Telephone Company.

EC Declaration of Conformity



Hereby Bittel declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Jacks:

Use RJ11C USOC standard modular jacks.

WARRANTY

This product is warranted for a period of 12 months from the date of purchase against faulty materials or workmanship.

If during this period a defect arises, we may repair or replace the product, at Bittel’s discretion, provided that:

- 1. The product has not been used for any purpose other than normal use.
- 2. Unauthorized product repair or modifications have not been attempted.
- 3. The product has never been used in a harsh or corrosive environment.
- 4. No damage in transit.

THIS LIMITED WARRANTY GIVES THE BUYER SPECIFIC LEGAL RIGHTS. THE BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

This warranty is only valid for merchandise purchased directly from Bittel or dealers or distributors authorized by Bittel Co.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CONTACT INFORMATION

Shandong Bittel Intelligent Technology Co., Ltd.

Telephone: (86) 633-2212119/2212113
Internet: www.bittelgroup.com
Email: info@bittelgroup.com

Address: No. 177 Honghai 1st road
Rizhao, China, 276800

**Service center North America:
Bittel Americas Inc.**

683 Quinn Ave
San Jose, CA 95112
Telephone 408-298-8206

Copyright © 2024 Bittel Inc. All rights reserved.

Produced in licence from:

Bell Xpress A/S

www.bellxpress.dk

ENVIRONMENTAL CONCERNS AND DISPOSAL

Electric and electronic appliances contain materials, components and substances that can be damaging to people's health and to the environment, if the waste is not disposed of correctly. Electric and electronic appliances are marked with a crossed-out wheelee bin symbol as illustrated below. It indicates that electric and electronic appliances are banned from being disposed of as general household waste, and have to be collected separately.

Please ask you dealer about current means of disposal.



- The contents of this manual are subject to change without notice.
- The manufacturer and its suppliers accept no liability whatsoever for any damage, expense, loss of profits or any other damage incurred as a result of using this product.



Generation to generation...